



IMPORTANT

UltraLITE systems include one Headset labeled "MAIN".



This MAIN headset must be

Turned "ON" to link the corresponding Remote headsets.

(Note: the MAIN headset programming button is recessed
to protect against accidental activation.)

UltraPAK Operation



STARTUP

1. Turn ON the MAIN headset (or HUB switch is located below battery compartment), flashing blue LED on earcup/HUB confirms search mode.
2. Turn ON the remote headset(s) & /UltraPAKs, press the power button located above volume controls. Flashing blue LED confirms search mode.
3. Flashing LEDs change to solid blue to indicate connection.

ADJUSTING MICROPHONE

1. Position the microphone one finger's width from the corner of your mouth to ensure superior speech recognition & noise cancellation.



SET VOLUME

1. UltraPAK feature 5 volume settings. Slowly click UP or DOWN to select.
2. Audible tone indicates volume level.
3. Double tone indicates lowest or maximum volume has been reached.

SHUT DOWN

1. Power OFF the MAIN headset, then press and HOLD the power button on the remote headset(s) & UltraPAKs for 4-5 seconds.
2. *To preserve optimum charge level, remove battery from units when not in use.*

BATTERY CHARGING

1. Batteries are charged via the multi-charger – Insert batteries making sure the contacts are aligned.
2. RED = Charging, GREEN = Fully charged.



A repetitive beep indicates low battery power.